







QUICK GUIDE


SYSTEM REQUIREMENTS

- Operation System
 Windows XP / 7 / 8 / 8.1 / 10
- 2. 2x free USB ports

INSTALLATION INSTRUCTIONS

- 1. Plug USB connectors of Double Tap to a USB port of your PC
- 2. Wait until your system detects, configures the plug and play device and finishes the installation
- 3. Enjoy gaming with Double Tap

DOUBLETAP **MOUSE FUNCTIONS**

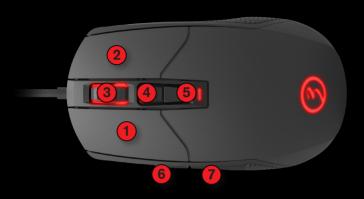

DEFAULT BUTTON ASSIGNMENT

- Click
- Menu
- Wheel Click and scroll
- Dpi Step upDpi Step downIE Forward
- **IE Backward**

DOUBLETAP KEYBOARD FUNCTIONS

 Press + FI on keyboard to switch between 9 default colors. Only available in some effects.



Press 3 + F1, 3 + F2, 3 + F3 on keyboard to adjust the red, green or blue hue.



Press 3 + F5 on keyboard to switch lighting mode.



Press 3 + F6 on keyboard to choose lighting direction and area.



Press 3 + F6 on keyboard to choose lighting direction and area.



• Press (3) + F7 on keyboard to choose lighting speed.



• Press 3 + F9 or 3 + F9 to choose normal mode (1X) or turbo mode (8x).



• Press (3) + F11 or (3) + F12 to full key lock mode or windows key lock.





Press 3 + ESC to turn on / off backlit. Press it for 10 sec to reset.



C € STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DI-RECTIVES

Ozone declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directive: 2014/30/EU, as applicable. The technical documentation required by the Conformity Evaluation process is in Ozone's possession and can be requested through info@ozonegaming.com

DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste.

It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point.

The pick-up and separate recycling contributes for the preservation of natural resources and suppresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment.

For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

WARRANTY

Who does the warranty protect:

This warranty is valid for the original purchaser only.

What does the warranty protect:

For warranty claims, please contact Ozone's overseas distribution partners in your country. Find the distribution partner list at www.ozonegaming.com

Warranty: 2 years from the purchasing date. (Depending on the laws of each country)

URL: www.ozonegaming.com

E-mail: support@ozonegaming.com

What does not the warranty cover:

- 1. Any product, on which the serial number has been defaced, modified or removed.
- 2. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized

product modification, or failure to follow instructions supplied with the product.

- 3. Repair or attempted repair by anyone not authorized by Ozone Gaming.
- 4. Damage to or loss of any programs, data or removable storage media.
- 5. Software or data loss occurring during repair or replacement.
- 6. Any damage of the product due to shipment.
- 7. Removal or installation of the product.
- 8. External causes, such as electric power fluctuations or failure.
- 9. Use of supplies or parts not meeting Ozone Gaming's specifications.
- 10. Normal wear and tear.
- 11. Any other cause which does not relate to a product defect.

If you have any questions regarding technical problems, please contact us via our website:

WWW.OZONEGAMING.COM

Ozone reserves the right for any modifications in text and/or images.



#WithinTheGame www.ozonegaming.com